



MARS ECO RACK & TOWER Series

Single Phase 208/220/230/240VAC

With output transformer for single or split phase



SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS. This manual contains important instructions that should be followed during installation and maintenance of the UPS and batteries.

The UPS that are covered in this manual are intended for installation in an environment within 0 to 50°C, free of conductive contaminant.

Certification standards

- Safety: IEC/EN 62040-1, UL 1778, CSA C22.2 No. 107.3-14
- EMC: EN/IEC 62040-2, FCC PART 15
- Performance: IEC/EN 62040-3

Special symbols



RISK OF ELECTRIC SHOCK - Observe the warning associated with the risk of electric shock symbol.



Important instructions that must always be followed.



Pb

EU separate collection and lead content mark for lead acid batteries. Indicates that the battery must not be disposed of to the normal household waste but be separately collected and recycled.



EU separate collection mark for waste electrical and electronic equipment (WEEE). Indicates that the item must not be disposed of to the normal household waste but be separately collected and recycled.



Information, advice, help.



Refer to the user manual.

Safety of persons

- **RISK OF VOLTAGE BACKFEED.** The system has its own power source (the battery). Isolate the UPS and check for hazardous voltage upstream and downstream during lockout-tagout operation. Terminal blocks may be energized even if the system is disconnected from the AC power source.
- Dangerous voltage levels are present within the system. It should be opened exclusively by qualified service personnel.
- The system must be properly grounded.

- **CAUTION:** The battery supplied with the system contains small amounts of toxic materials. To avoid accidents, the directives listed below must be observed:
 - Do not dispose of batteries in a fire. The batteries may explode. Dispose of used batteries according to the instructions.
 - Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
 - Failed batteries can reach temperatures that exceed the burn thresholds for touchable surfaces
 - Servicing of batteries should be performed or supervised by personnel knowledgeable about batteries and the required precautions.
 - Risk of explosion if battery is replaced by an incorrect type. When replacing batteries, replace with the same type and number of batteries or battery packs.
- **CAUTION:** A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:
 - Remove watches, rings, or other metal objects.
 - Use tools with insulated handles.
 - Wear rubber gloves and boots.
 - Disconnect charging source prior to connecting or disconnecting battery terminals.
 - Determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of a grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance.
 - Do not lay tools or metal parts on top of batteries.

Product safety

- The UPS connection instructions and operation described in the manual must be followed in the indicated order.
- UPS enclosure IP rating IP20.
- **CAUTION** - To reduce the risk of fire, the unit connects only to a circuit provided with branch circuit overcurrent protection.
- The upstream circuit breaker for Normal AC/Bypass AC must be easily accessible. The unit can be disconnected from AC power source by opening this circuit breaker.
- An additional AC contactor is used for back feed protection and must comply with IEC/EN 62040-1 (the creepage and clearance distances shall meet the basic insulation requirements for pollution degree 2).
- Disconnection and overcurrent protection devices shall be provided by others for permanently connected AC input (Normal AC/Bypass AC) and AC output circuits.


- Check that the indications on the rating plate correspond to your AC powered system and to the actual electrical consumption of all the equipment to be connected to the system.
- PERMANENTLY CONNECTED UPS, an appropriate and readily accessible disconnect device shall be incorporated external to the equipment.
- The disconnect device must be opened all ungrounded conductors connected to the AC supply.
- UPS is transferred to maintenance bypass mode, the external power disconnect device must be disconnected.
- Never install the system near liquids or in an excessively damp environment.
- Never let a foreign body penetrate inside the system.
- Never block the ventilation grates of the system.
- Never expose the system to direct sunlight or source of heat.
- If the system must be stored prior to installation, storage must be in a dry place.
- The admissible storage temperature range is -25°C to +55°C without battery (-15°C to +40°C with battery).
- This UPS may be provided with a maximum of 6 extension battery cabinets or equivalent.

Product EMC

- **WARNING:** This is a category C2 UPS product. In a residential environment, this product may cause radio interference, in which case the user may be required to take additional measures.
- Supplier's Declaration of Conformity of Federal Communications Commission Statement
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.
- For questions regarding this FCC SDoC declaration, contact Ablerex Corporation by telephone or through the Internet.
- Ablerex Latam Corporation. info@ablerexlatamllc.com
- 1500 NW 89th Court, Suite 122, Doral, FL 33172, U.S.A.
- Telephone : +1-786-6223231
- **NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio

frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense

Special precautions

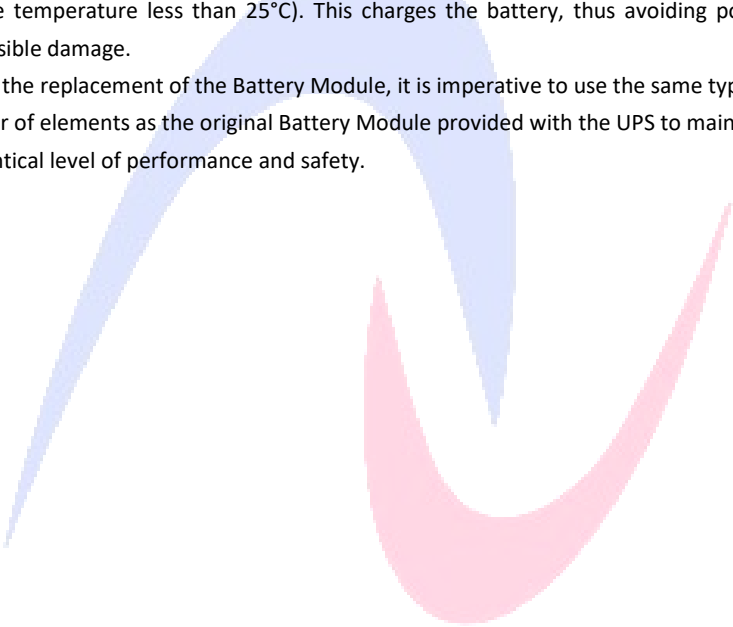- The unit is heavy: wear safety shoes and use vacuum lifter preferentially for handling operations.
 - All handling operations will require at least two people (unpacking, lifting, installation in rack system).
 - Before and after the installation, if the UPS remains de-energized for a long period, the UPS must be energized for a period of 24 hours, at least once every 6 months (for a normal storage temperature less than 25°C). This charges the battery, thus avoiding possible irreversible damage.
 - During the replacement of the Battery Module, it is imperative to use the same type and number of elements as the original Battery Module provided with the UPS to maintain an identical level of performance and safety.
- 

CONTENTS

1. Introduction.....	1
1.1 Product Features	1
1.2 Environmental protection	2
2. Product Overview.....	3
2.1 Model list	3
2.2 Presentation	4
2.3 Circuit diagram.....	7
3. Installation	8
3.1 Unpacking and Inspecting.....	8
3.2 Checking the accessory kit.....	9
3.3 Mechanical Install.....	10
3.4 Power cables connection	14
4. Parallel system Installation and Operation (Optional).....	22
4.1 Wiring for AC Cable	22
4.2 Wiring for parallel signal cable	25
4.3 Parallel system Operation	26
5. Operation.....	27
5.1 LCD panel	27
5.2 LCD description	29
5.3 Display functions	30
5.4 User settings	30
5.5 Starting the UPS with utility.....	31
5.6 Starting the UPS on Battery	32
5.7 UPS Shutdown	32
6. Communication.....	33
6.1 RS232 and USB	33
6.2 UPS remote control functions	33
6.3 Intelligent Card (optional).....	34
6.4 UPS Management Software.....	34
7. UPS maintenance	35
7.1 Equipment care	35
7.2 Transporting the UPS	35
7.3 Storing the equipment	35
7.4 Recycle	35
8. Troubleshooting.....	36
8.1 Typical alarms and faults.....	36
8.2 Silencing the alarm	38
9. Specifications	39
9.1 UPS Block Diagram	39
9.2 UPS Specification.....	39

1. Introduction

Thank you for selecting our UPS to protect your electrical equipment.

We recommend that you take the time to read this manual to take full advantage of the many features of your UPS.

Before installing your UPS, please read the booklet presenting the safety instructions. Then follow the indications in this manual.

1.1 Product Features

The UPS protects your sensitive electronic equipment from the most common power problems, including power failures, power sags, power surges, brownouts, line noise, high voltage spikes, frequency variations, switching transients, and harmonic distortion.

Special characteristic:

- Double converter with pure sine waveform output
- Full digital control
- High charger capability, the charger current is up to 12Amps
- Communication ports: RPO, Dry in, Dry out, intelligent slot, USB, RS232
- Dot-matrix LCD, it supports multi-language
- ECO Mode
- Start-able without battery
- HV/LV output optional
- Transformer box integrated with MBP function

1.2 Environmental protection

Products are developed according to an eco-design approach.

Substances

This product does not contain CFCs, HCFCs or asbestos.

Packing

To improve waste treatment and facilitate recycling, separate the various packing components.

- The cardboard we use comprises over 50% of recycled cardboard.
- Sacks and bags are made of polyethylene.
- Packing materials are recyclable.

Follow all local regulations for the disposal of packing materials.

Product

The product is mainly made up of recyclable materials.

Dismantling and disassembly must take place in compliance with all local regulations concerning waste. At the end of its service life, the product must be transported to recycling centers, re-use and treatment facilities for waste electrical and electronic equipment (WEEE).

Battery

The product contains lead-acid batteries that must be processed according to applicable local regulations concerning batteries.

The battery may be removed to comply with regulations and in view of correct disposal.

2. Product Overview

2.1 Model list



1. 'xxKS' model means 'long backup model' without battery.
2. 16 or 20 batteries could be selected for UPS and EBC (External Battery Modular).
3. The weight in the table below is reference only, please see the labels on the carton for details.
4. Dimension 'D' is chassis only, not including panel.

- UPS、EBC&Transformer model:

Product	Model name	Net Weights (kg)	Unit Size (W x H x D)(mm)
UPS	AB-MS-ECO6000RT-PM	13.6	438*86.3(2U)*653
	AB-MS-ECO10000RT-PM	15.5	438*86.3(2U)*681.7
EBC	AB-MS-ECOEBC10000RT	60.5	438*129(3U)*559
	AB-MS-ECOEBC6000RT	56.1	
Transformer	AB-MS-ECOTX6000RT	41.6	685.8*438*86.3
	AB-MS-ECOTX10000RT	52.7	685.8*438*129

- Optional modular or accessory:

If order other type function modular or accessories, please contact distributors/agents.

Type	Description	Remark
Intelligent Card	Dry Contact card (AS400)	See in chapter 6.3
	NMC card	
	MODBUS card (CMC)	
EMP	Temperature and humidity sensors	
COMM Cable	RS232 CABLE	For RS232 communication
Parallel Kit	For parallel system installing	See in chapter 4.0
Battery cable	Battery cable (20 batt.)	1.8m length,
	for UPS connect with user's own EBC	see in chapter 3.4.3
Rail kit	Rail kit for RT model in Rack installing	See in chapter 3.3.2
Gland kit	Gland kit for RT model	For RT UPS

2.2 Presentation

- UPS Modular


Front view

1. Ventilation area
2. LCD Modular, including: 2(1)---Button, 2(2)---LCD screen, 2(3)---LED indicator



Rear view

1. INTELLIGENT SLOT
2. RS232
3. USB
4. RPO& DRY in/out
5. PARALLEL SLOT
6. RJ50 (for EBC detect /RT Transformer detect)
7. AC Input /Output port(Terminal Block)
8. Breaker of input(optional ,default is no)
9. External battery port

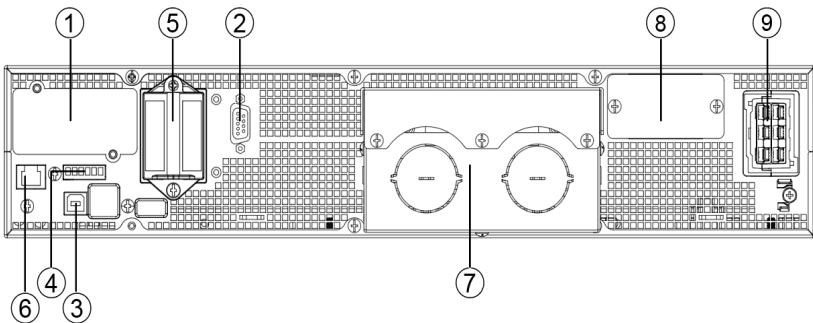


6KS/10KS

- EBC(External Battery Modular):


Front view

1. EBC label area
2. EBC label

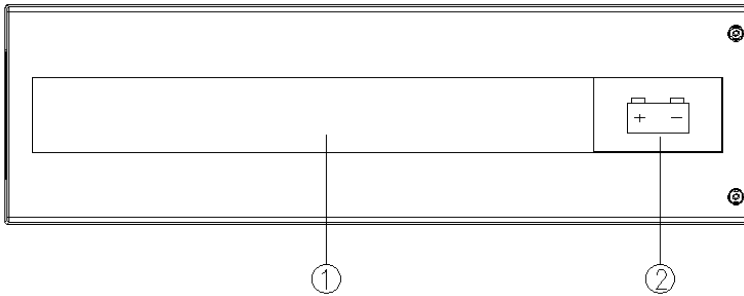

Rear view



1. Fuse board cover (replace EBC fuse)
2. EBC port 1
3. EBC port 2
4. EBC detection Box (RJ50 port)

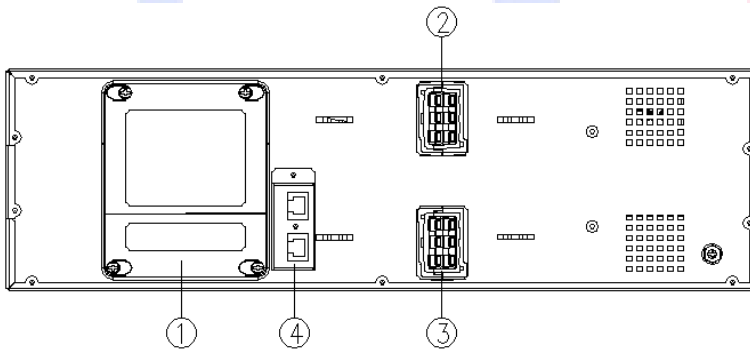

- Transformer Modular


Front view


1. Front panel 1
2. Front panel 2

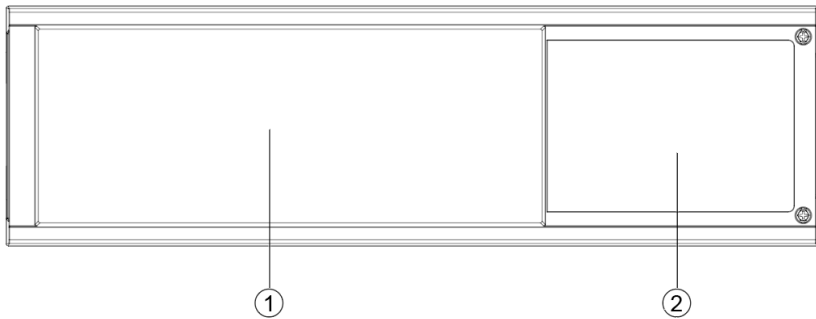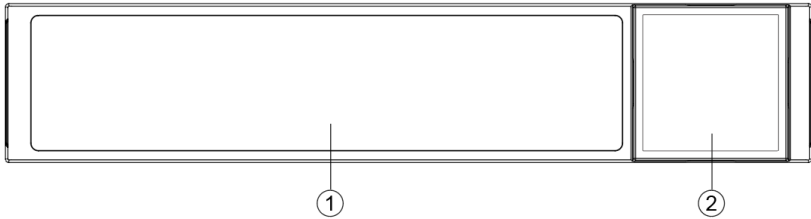


Rear view

1. Bypass maintenance switch
2. Input Breaker
3. AC Input /Output port(Terminal Block)
4. EBC/MBP detection Box (RJ50 port)
5. Parallel N line interface

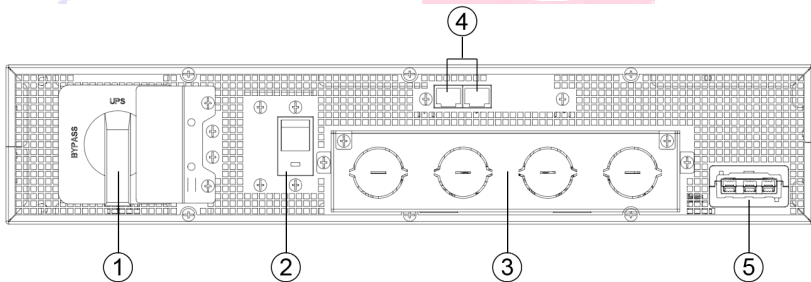

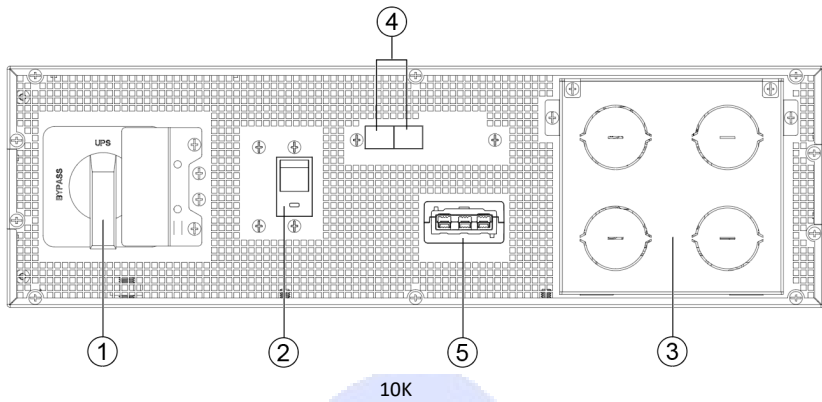

2.3 Circuit diagram

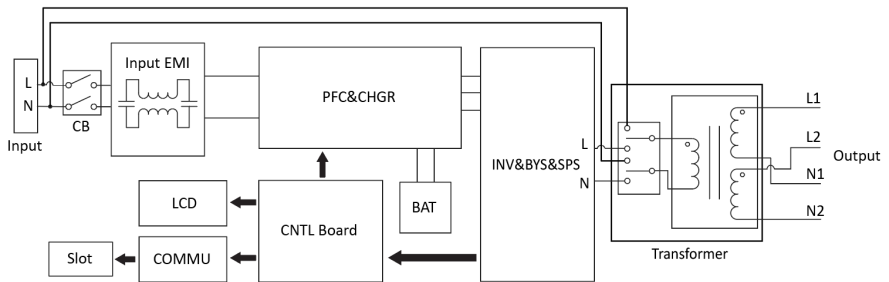

3. Installation

It is recommended to move the equipment to the installation site by using a pallet jack or a truck before unpacking.

The system may be installed only by qualified electricians in accordance with applicable safety regulations.

Some of cabinet is heavy, please install it with at least two peoples.


3.1 Unpacking and Inspecting




Unpacking the unit in a low-temperature environment may cause condensation occurred in and on the cabinet. Do not install the unit until the inside and outside of the unit are absolutely dry (hazard of electric shock).

If any equipment has been damaged during shipment, keep the shipping cartons and packing materials for the carrier or place of purchase and file a claim for shipping damage. If you discover damage after acceptance, file a claim for concealed damage.


- RT UPS

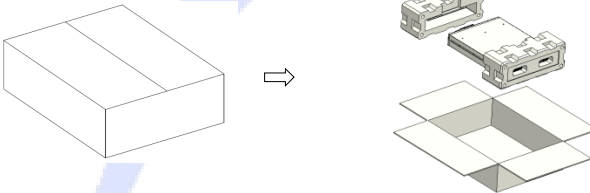


- RT EBC

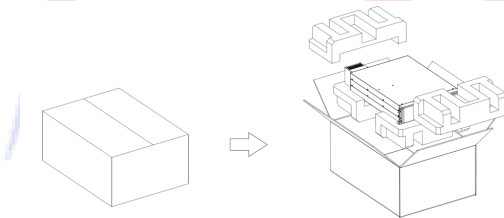

- RT Transformer-2U

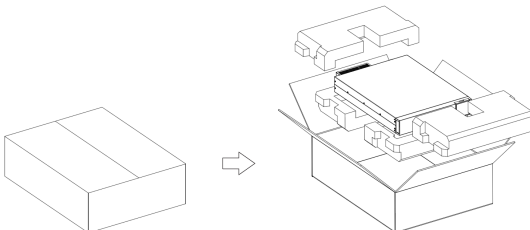

- RT Transformer-3U

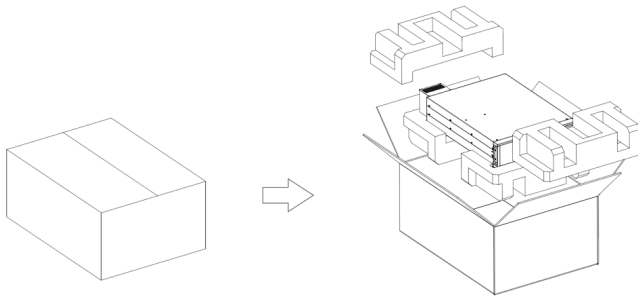

Note:

The cabinet is heavy, please see spec weight provided on the carton/label.

Do not lift the unit's front panel and rear panel.

Discard or recycle the packaging in a responsible manner, or store it for future use.



Packing materials must be disposed in compliance with all local regulations concerning waste.

3.2 Checking the accessory kit

	UPS		RT EBC	Transformer	
	6KS	10KS		6K	10K
Battery cable	O	O	√		
EBC detection cable			√	√	√
Copper bus-bar				√	√
USB cable	√	√			
RS232 cable	O	O			
Parallel cable	O	O			
Rack ear	√	√	√	√	√
Rack rail kit	O	O	O	O	O
Quick start(EBC)			√		
User manual(UPS)	√	√			

Note: √--- Standard configuration; O---Optional, default is Not configured;

3.3 Mechanical Install

Note:

1. RT models support 2 installation modes: Rack installation and Tower installation.
2. To keep good ventilation, please keep a free-space (500mm at least) for front / rear panels of the module.
3. Do not carry the front/rear panel of the module during installing.


● **Rack installing**

This procedure is suitable for 19 inch rack cabinet installation, it is recommended that the depth of the cabinet be no less than 800mm.


UPS model

Identify the final position and keep '2U' space for this installing.


1. Install the rail kit (if configured). This rail kit is '2U' & with screw holes (M5)', the depth of the rail kit is: 443-773 mm.

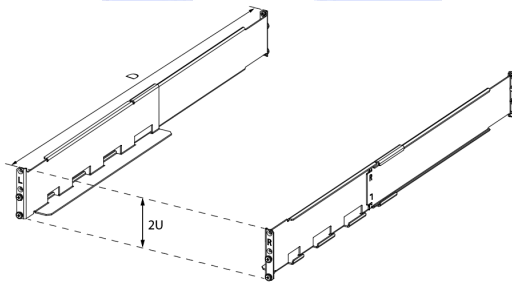


Fasten the rail kit to the cabinet with 8pcs M5 screws + washers (as below):

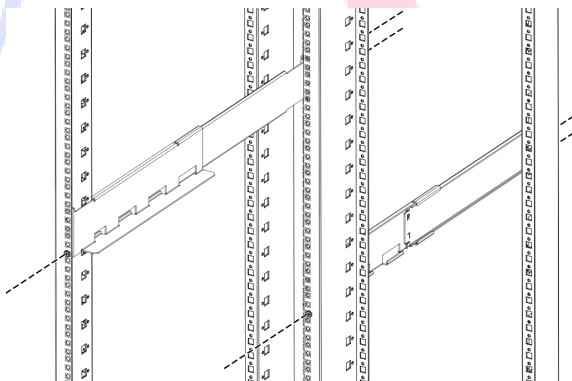

2. Install 'Rack ear' to the unit by the M4 screws(flat head).

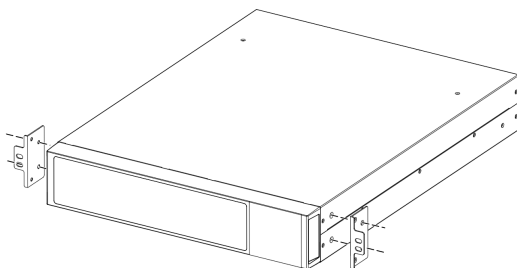


3. Slide the unit into 'rail kit' and make sure tighten the 'rack mounting screw'.

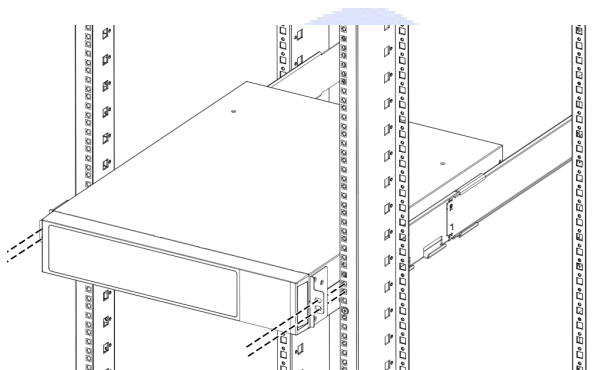


EBC model

Identify the final position and keep '3U' space for this installing, and it is recommended to be installed below to UPS.


1. Install the rail kit(if configured): same as UPS as above.
2. Install 'Rack ear' to the unit by the M4 screws(flat head).

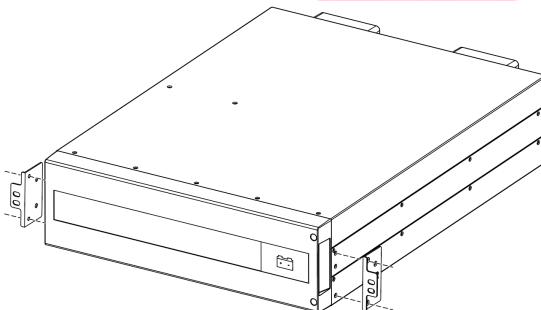

3. Slide the unit into 'rail kit' and make sure tighten the 'rack mounting screw'.

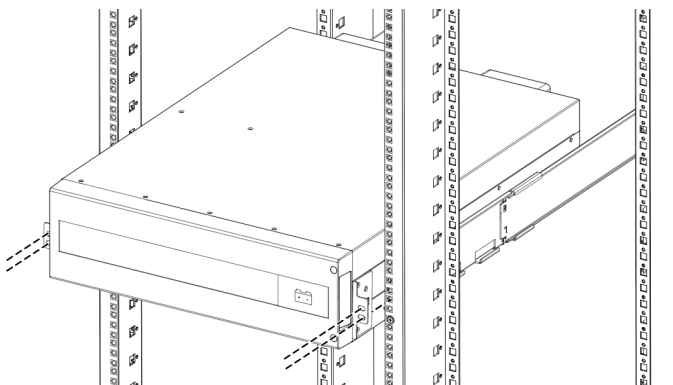



Transformer model

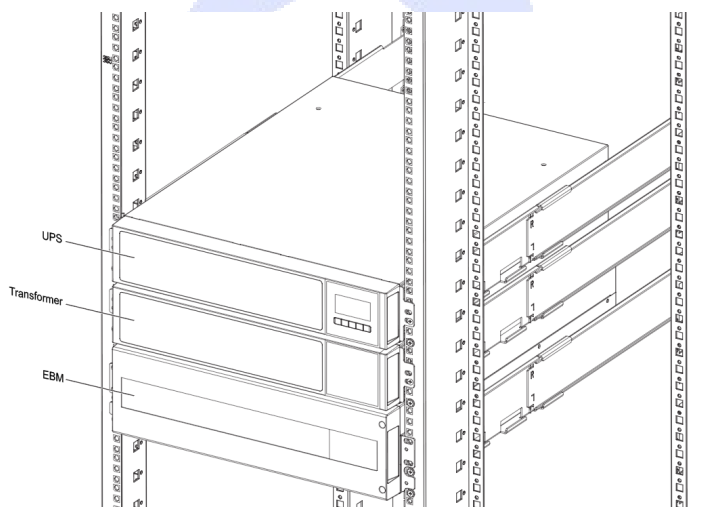



● Tower installing

UPS model

1. Rotate the LCD model to tower direction.

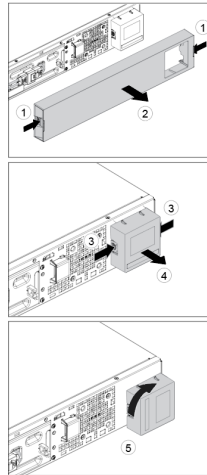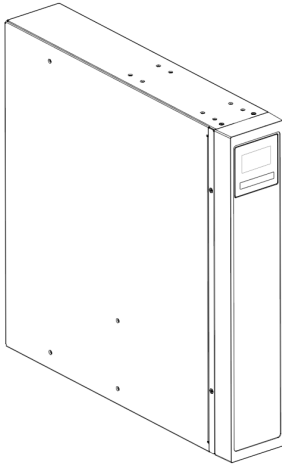


2. Set up the 'Tower foot', then take the unit into 'Tower foot'.

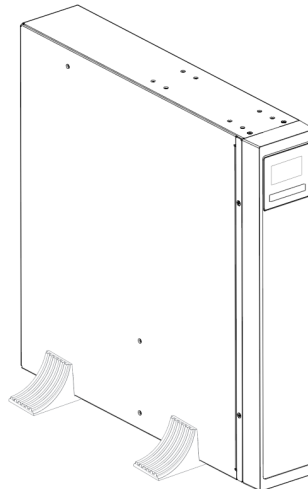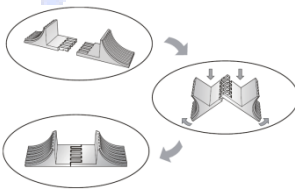


EBC module

1. Set up the 'Extension plate' as below and install to 'Tower foot' from UPS.
2. Take the UPS& EBC into 'Tower foot' individually: Place EBC modular to UPS's right side and align with front-panel.

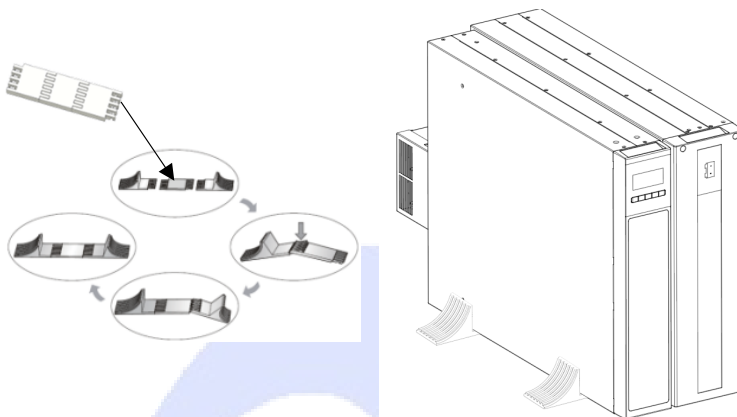

Transformer module

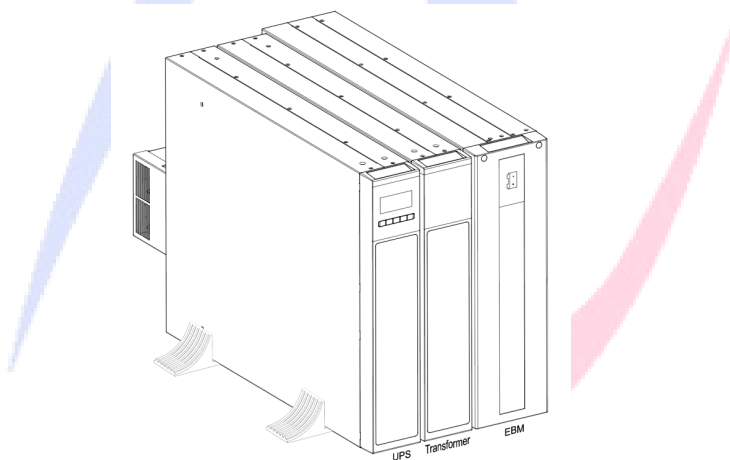

3.4 Power cables connection


This chapter introduces how to wire AC IN/OUT cable to UPS in different modes, and UPS connecting with EBC/ Transformer.

3.4.1 Input /Output wiring specifications

Recommended protective devices and cable cross-sections

Recommended upstream protection

UPS power rating	Upstream circuit breaker
6000VA	D curve – 63A
10000VA	D curve – 100A

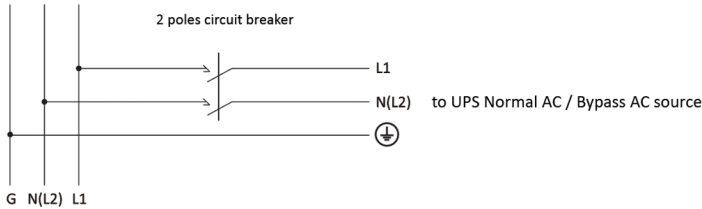


Danger!

The rated current of the utility power switch must be greater than the UPS input current, otherwise the utility power switch may be burnt!

Model	6K	10K
Protective earthing conductor Min cross section	6mm ² (8AWG) 75°C type	16mm ² (4AWG) 75°C type
Input L, N, G Min conductor cross section	6mm ² (8AWG) 75°C type	16mm ² (4AWG) 75°C type
Input Breaker	D curve-63A	D curve-100A
Output L,N, (HV mode or LV-2 mode) Min conductor cross section	4mm ² (10AWG) 75°C type	10mm ² (6AWG) 75°C type
Output L,N, (LV-1 mode) Min conductor cross section	10mm ² (6AWG) 75°C type	25mm ² (2AWG) 75°C type
Jumper wire (for parallel system)	6mm ² (8AWG) 75°C type	16mm ² (4AWG) 75°C type
Connect UPS and transformer Min cross section	6mm ² (8AWG) 75°C type	16mm ² (4AWG) 75°C type



It is recommended that an external isolating device should be installed between the mains input and UPS as shown in Figure

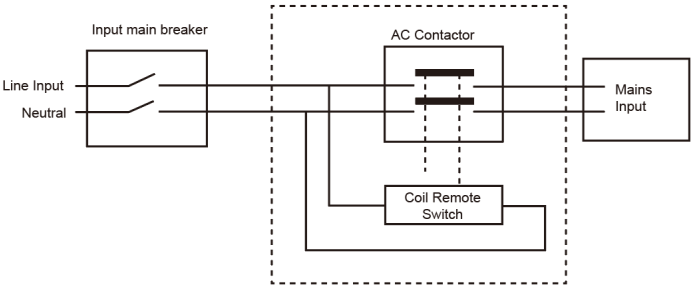

3.4.2 Wiring for AC Cable (AC source to UPS)

High leakage current:



Earth connection essential before connecting supply.




This type of connection must be carried out by qualified electrical person.

Before carrying out any connection, check that the upstream protection devices (Normal AC source and Bypass AC source) are open "O" (Off).

Always connect the ground wire first.

6K model:

Layout of terminal block(TB) of the UPS

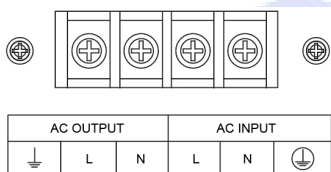


Note:

1. AC INPUT: UPS input TB (L/N(L2), PE is screw)
2. AC OUTPUT: UPS output TB (L/N, PE is screw)


Transformer

LV mode-1

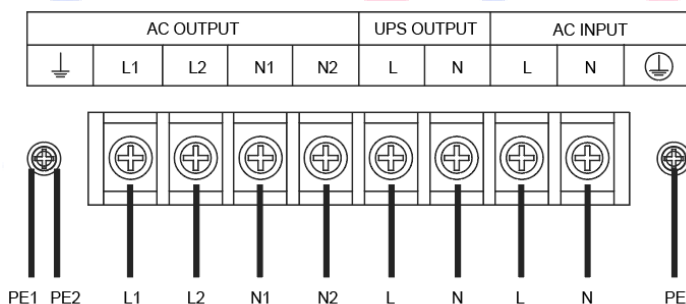


Output voltage is 104V*2/110V*2/115V*2/120V*2(According to LCD setting).
Each output can only take half of UPS rating in LV model-1.

LV mode-2

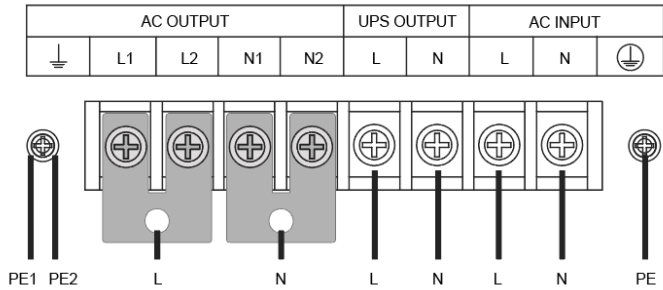


Output voltage is 104V/110V/115V/120V(According to LCD setting).

LV mode-3

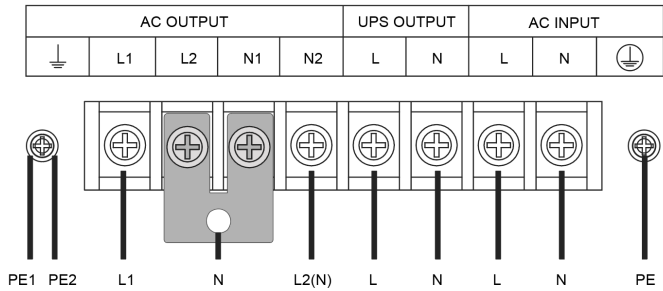


Output voltage is $104V \times 2 / 110V \times 2 / 115V \times 2 / 120V \times 2$ (According to LCD setting).
Each output can only take half of UPS rating in LV model-3.

HV mode

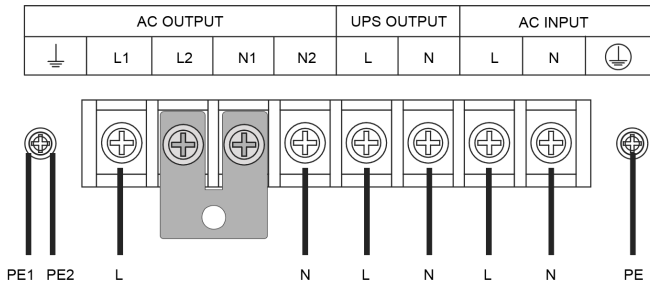

10K model:

Layout of terminal block(TB) of the UPS

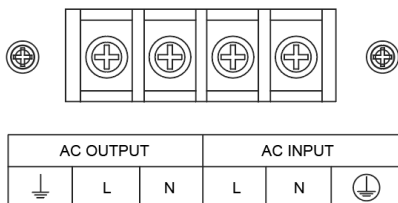


Note:

1. AC INPUT: UPS input TB (L/N(L2), PE is screw)
2. AC OUTPUT: UPS output TB (L/N, PE is screw)


Transformer

LV mode-1

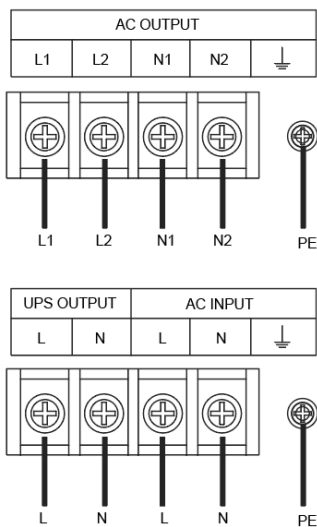


Output voltage is $104V \times 2 / 110V \times 2 / 115V \times 2 / 120V \times 2$ (According to LCD setting).
Each output can only take half of UPS rating in LV model-1.

LV mode-2

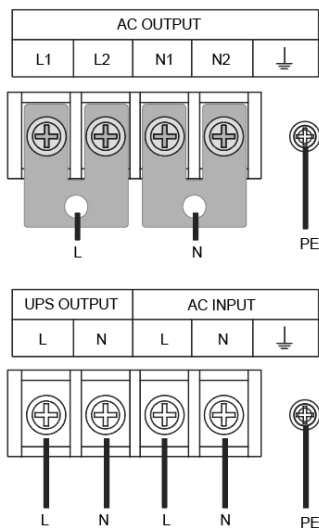


Output voltage is 104V/110V/115V/120V(According to LCD setting).

LV mode-3

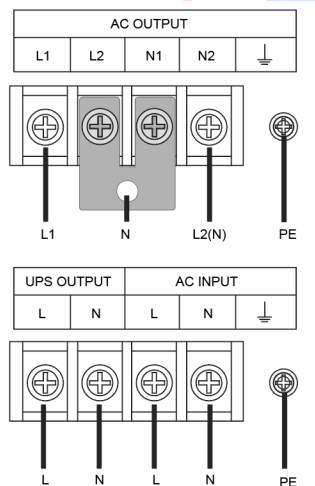

Output voltage is $104V \times 2 / 110V \times 2 / 115V \times 2 / 120V \times 2$ (According to LCD setting).
Each output can only take half of UPS rating in LV model-3.


HV mode

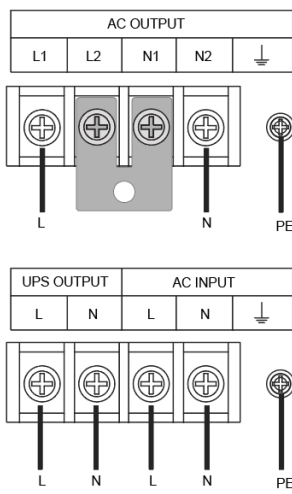

3.4.3 Wiring with external battery modular (EBC) (DC source to UPS)



1. Be sure to disconnect the battery cable from the EBC before connecting the battery terminals of the UPS
 2. Make sure the UPS is completely off before connecting or disconnecting the EBC.
 3. Before connecting the EBC, make sure that the EBC specification is compatible with UPS configuration.
 4. Do not reverse the polarity of the external battery.
 - Connect with the configured EBC:
- Connect EBC to UPS with 'Battery cable' and 'EBC detection cable'.

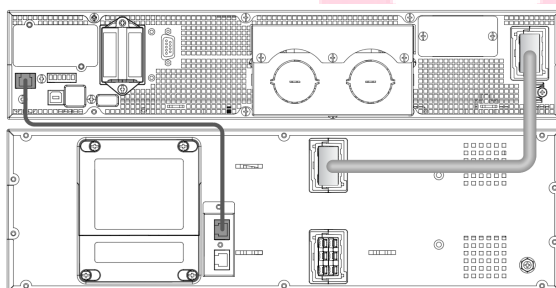


Note:


Extended runtime with up to 6 Extended Battery Modules(EBCs) per UPS.

3.4.4 Wiring with RT

UPS can be used with the Transformer to implement the maintenance bypass switching function to ensure that the output of the system is not affected during the UPS maintenance. And Transformer can realize isolation and voltage reduction function

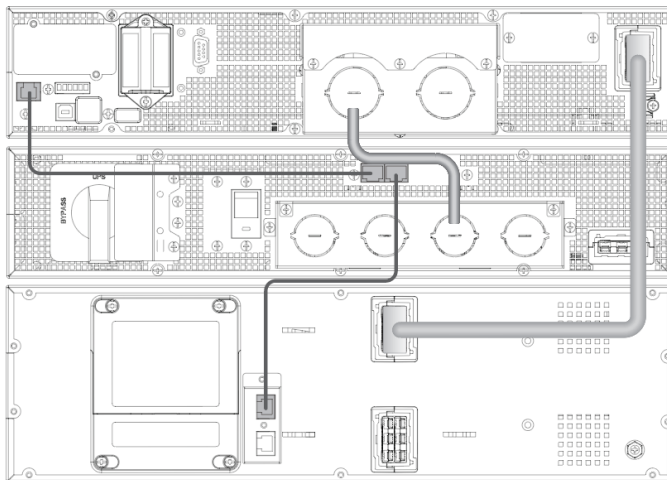

6K

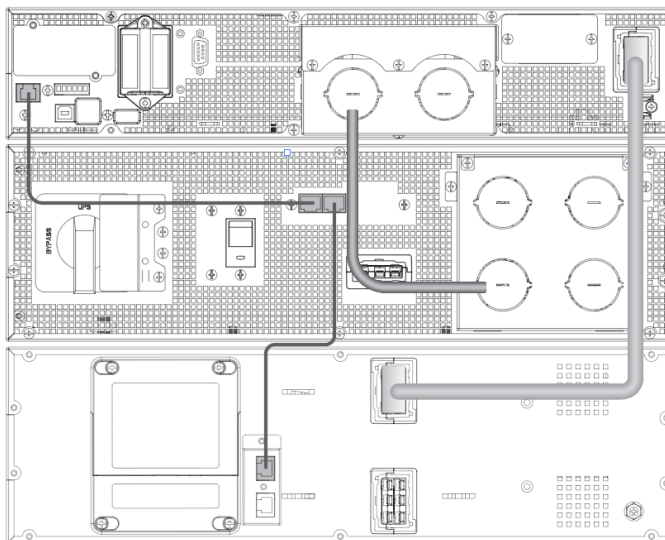


10K

4. Parallel system Installation and Operation (Optional)

If your UPS is configured with parallel function, up to 3 UPSs can be connected in parallel to configure a sharing and redundant output power.

In parallel system, the mechanical installation for each modular is same as the single system.

Parallel system AC cable diagram:

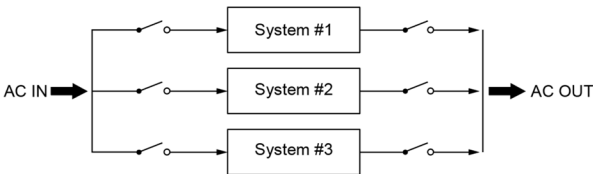


4.1 Wiring for AC Cable

1. Wiring length requirement:
When the distance between the load and the parallel UPS is less than 10 meters, the length difference between the input/output lines between the UPSs in the parallel system is less than 20%. When the distance between the load and the parallel UPS is greater than 20 meters, the length difference between the input/output lines between the UPSs in the parallel system is less than 5%.
2. In the parallel system, common battery application is not supported. independent EBC connect to each UPS, please refer to chapter 3.4.3.
3. Professional installation is required, please set the parallel system in the restricted area!


Parallel system

6K:


LV mode-1

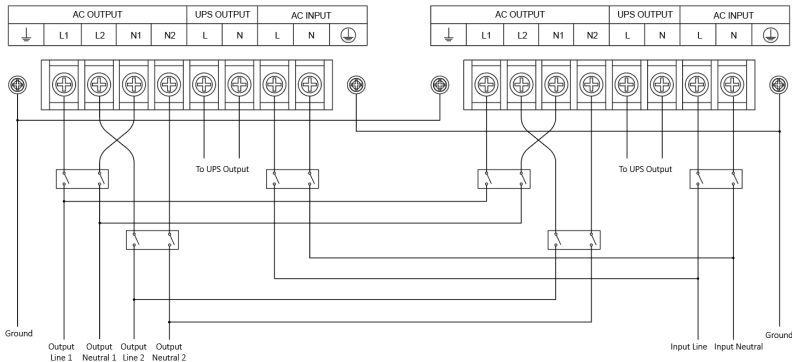

LV mode-2

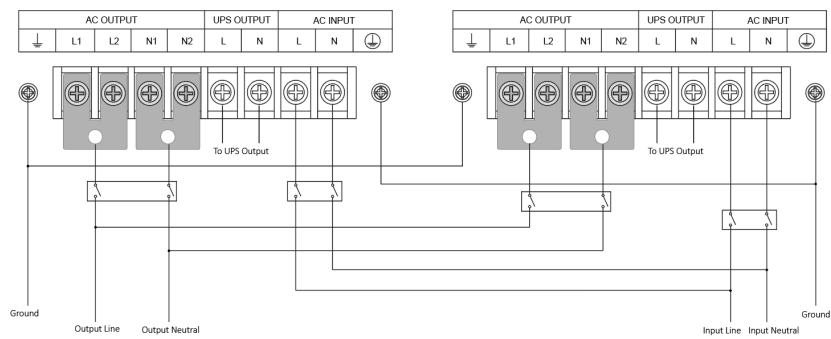


HV mode

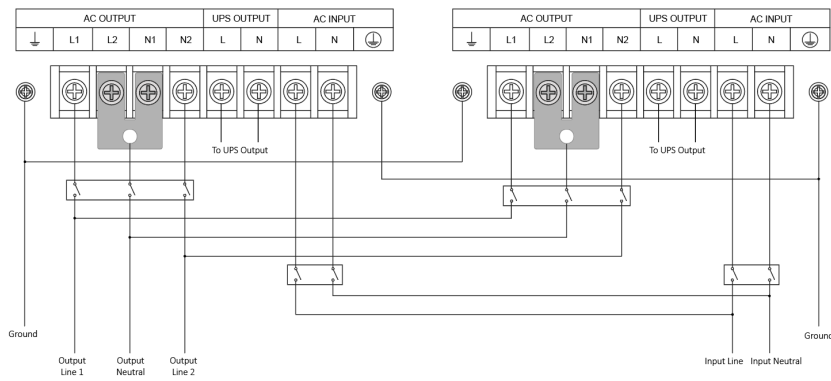


10K:


LV mode-1

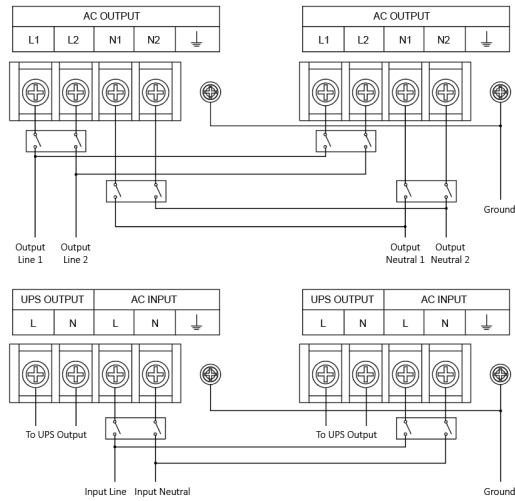


LV mode-2

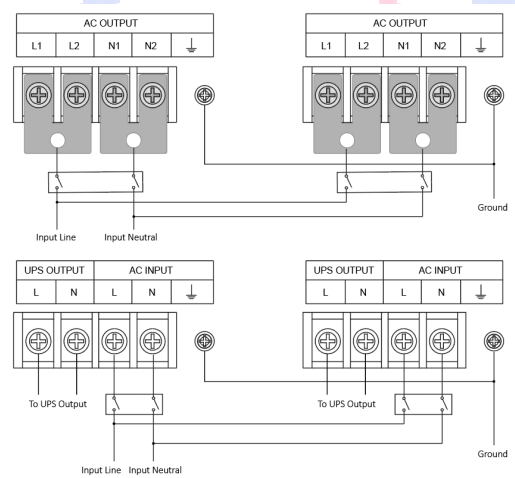

HV mode

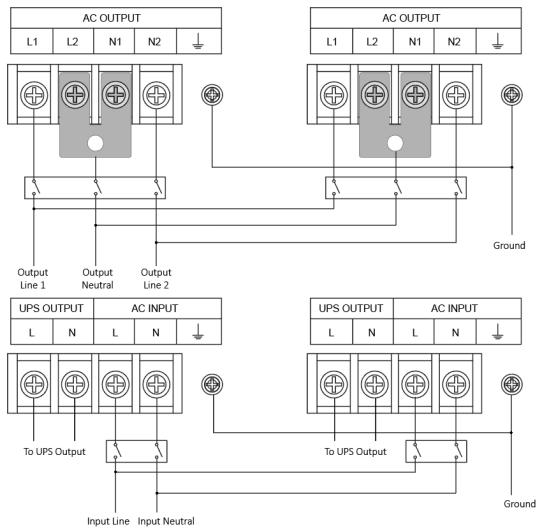


When 3 UPSs in parallel, JP1/JP2 wiring as below.




4.2 Wiring for parallel signal cable

Parallel signal cable connection diagram:

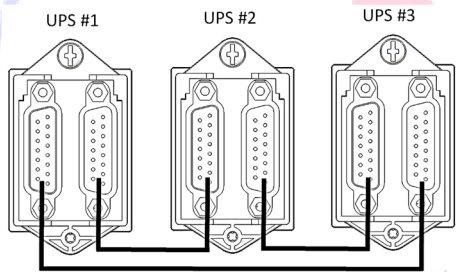

Remove the cover of 'parallel box', then connect each UPS one by one with 'parallel cable', make sure the cable is screwed to parallel port tightly.

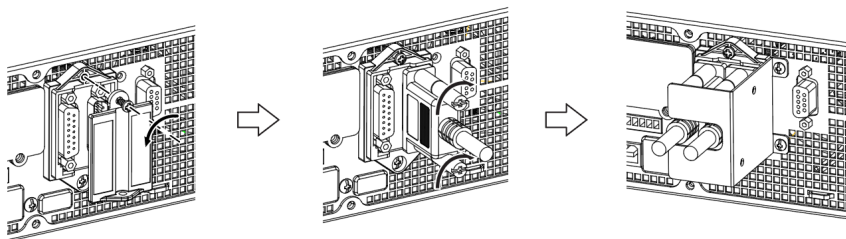

It is recommended to lock the 'parallel cable' (as above) for preventing the parallel ports suffering an unexpected pulling-force and causing the parallel system fault.


4.3 Parallel system Operation

1. Turn on the input breakers for the parallel UPS.
2. Pressing  button continuously for one UPS of the system, then the system will start to turn on and enter line mode.
3. Regulate the output voltage of each UPS separately, and check if the output voltage difference is less than 0.5V among the parallel system. If the difference is more than 0.5V, the UPS need to be regulated.
4. If the output voltage difference is less than 0.5V, pressing  button continuously for one UPS of the system, then the system will turn off. Turn off the input breakers to let UPS shut down. Then switch on the output breakers for all the UPS.
5. Turn on the input breakers for the parallel UPS. Pressing  button continuously for one UPS of the system, then the system will start to turn on and enter line mode and the system will work normally in parallel.

5. Operation

5.1 LCD panel

The UPS has a five-button graphical LCD. It provides useful information about the UPS itself, load status, events, measurements and settings.

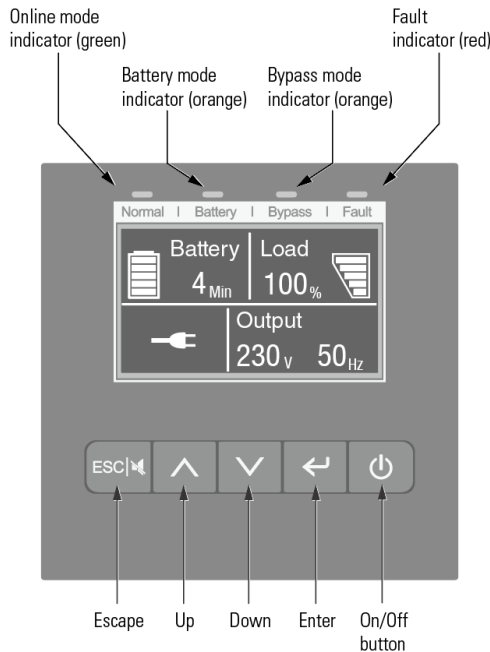

The LED:

Indicator	Status	Description
Normal Green	On	The UPS is operating normally on Online or on High Efficiency mode.
Battery Orange	On	The UPS is on Battery mode.
Bypass Orange	On	The UPS is on Bypass mode.
Fault Red	On	The UPS has an active alarm or fault. Please refer to section 8.1 Trouble shooting for more information

The buttons:

The button	Function	Illustration
	Power on	Press the Button for >100ms & < 1s can power on the UPS without utility input at the condition of battery connected
	Turn on	When the Unity is powered on, press the button for >3s can turn on the UPS
	Turn off	Press the button > 4s can turn off the UPS
	Scroll up	Press to scroll up the menu option
	Scroll down	Press to scroll down the menu option
	Enter menu	Select/Confirm the current selection
	Exit the present menu	Press to exit present menu to Main menu or the higher-level menu without changing a setting
	Mute buzzer	Press the button to mute the buzzer temporarily, once new warning or fault is active, buzzer will work again


The Buzzer:

The buzzer	General Meaning
1 beep every 2 minutes	Load supplied on bypass
1 beep every 4 seconds	Load supplied on battery If battery low, beep every second
1 beep every second	General warning active
2 beeps every second	Overload warning
Continuous	Fault active

Back Light:

After 10 minutes of inactivity, the LCD backlight will automatically dim. Press any button to restore the screen.

5.2 LCD description

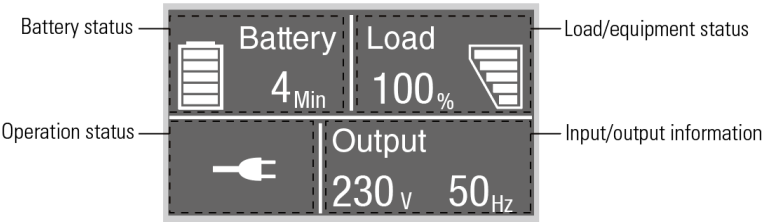

Operation status	Cause	Description
	Standby mode	The UPS is Off without output.
	Online mode	The UPS is operating normally and protecting the equipment.
 1 beep every 4 seconds	Battery mode	An utility failure has occurred, and the UPS is powering the equipment with battery. Prepare your equipment for shutdown.
 1 beep every 1 seconds	Battery mode with battery low	This warning is approximate, and the actual time to shutdown may vary significantly.
	High Efficiency mode	Once the mains are loss or abnormal, the UPS would transfer to Line mode or Battery mode and the load is supplied continuously.
	Converter mode	The UPS would free run with fixed output frequency (50Hz or 60Hz). The output maximum power and maximum charging current should be derating to 60% in converter mode.
	Bypass mode	Overload or fault has occurred, or a command has been received, and the UPS is in Bypass mode.
	Battery test	UPS is executing a battery test
	Battery fail	The UPS detects bad battery or battery disconnected

	Overload	Some unnecessary loads should be cut off to reduce the load.
	Fault mode	Some fatal problems happened.
	Parallel mode	UPS is working in parallel mode

5.3 Display functions

Use the two middle buttons ( and ) to scroll through the menu structure. Press the Enter () button to select an option. Press the ESC () button to cancel or return to the previous menu.

When starting the UPS, the display is in the default UPS status summary screen.

Main menu	Submenu	Display information or Menu function
UPS status		UPS mode, date/time, battery status, parallel information and current alarms
Event log		Displays the events and faults stored
Measurements		[Load] W VA A P%, [Input /Output] V Hz [Battery] % min V EBC, [DC Bus] V, [Temperature] °C
Control	Start battery test (single mode) Single battery test (parallel mode)	Starts a manual battery test in stand-alone mode Or starts a single battery test in parallel mode
	Parallel UPS battery test (parallel mode)	Starts a manual battery test in parallel mode
	Single UPS turn off (parallel mode)	Operate this machine to exit parallel connection
	Reset fault state	Clear active fault
	Reset event list	Clear events and faults
	Reset com card	Modbus TCP function inside UPS
	Restore factory settings	Restore to default factory settings
Settings		Refer to User settings
Identification		[Model name], [Serial number], [firmware version], [comm card firmware], [IP/MAC address]


5.4 User settings

Submenu	Available settings	Default settings
Password	Can be changed by user	4732
Language	English, Italiano, Français, Deutsch, Español, Русский, Polski, 简体中文	English
User password	[Enabled, ****], [Disabled]	Enabled
Audible alarms	[Enabled], [Disabled]	Enabled
Output voltage	[208V], [220V], [230V], [240V] Can be changed in Standby mode and Bypass mode	[230V]
Output frequency	[Autosensing], [converter 50Hz, 60Hz]	Autosensing
High efficiency	[Disabled], [Enabled]	Disabled
Auto bypass	[Disabled], [Enabled]	Enabled
Start/Restart	Cold start : [Disabled], [Enabled] Auto restart : [Disabled], [Enabled]	Enabled Enabled
Site wiring fault	[Enabled], [Disabled]	Disabled
Overload pre-alarm	[50%~105%]	105%
External battery	[Auto detection], [Manual EBC: 0~6], [Manual Ah: 0~300Ah]	Auto detection 0 EBC 0 Ah
Charger current	2-12A for 6-10KS	4A for 6-10KS
Dry in signal	[Disabled], [Remote on], [Remote off], [Forced bypass]	Disabled
Dry out signal	[Load powered], [On bat], [Low bat], [Bat open], [Bypass], [UPS OK]	Bypass
Ambient temperature alarm	[Enabled], [Disabled]	Enabled
Battery remaining time	[Enabled], [Disabled]	Enabled
Date and time	dd/mm/yyyy hh:mm	01/01/2020 00:00
LCD contrast	[0-100%]	50%
LV Output	[Enabled], [Disabled]	Disabled



Note: if the utility power is IT system, the site wiring fault function should be disabled.

5.5 Starting the UPS with utility

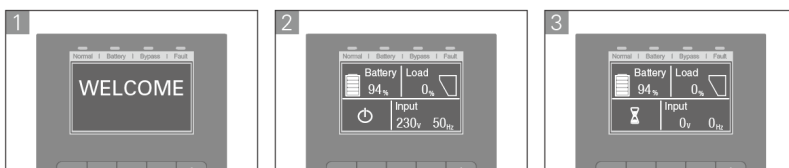


5.6 Starting the UPS on Battery



Before using this feature, the UPS must have been powered by utility power with output enabled at least once.


Battery start can be disabled. See the "Cold start" setting in "Start/Restart".

1

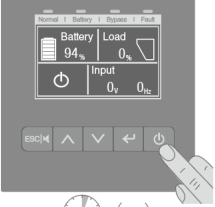


3 sec ((O))

2

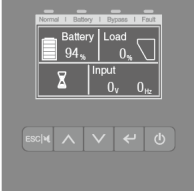

Turning on...


3

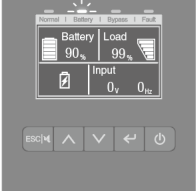

UPS on Battery mode


5.7 UPS Shutdown

1

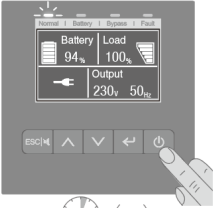

4 sec ((O))

2

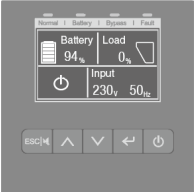

Turning off...

3



UPS Shutting off

6. Communication

6.1 RS232 and USB

- 1. Communication cable to the serial or USB port on the computer.
- 2. Connect the other end of the communication cable to the RS232 or USB communication port on the UPS.

6.2 UPS remote control functions

- **Remote Power Off (RPO)**

When RPO is activated, UPS will cut off output immediately, and continues to alarm.

RPO	Comments
Connector type	16 AWG Maximum wires
External breaker specification	60 V DC/30 V AC 20 mA max


Reset:

- 1. Check the RPO connector status;
- 2. Clear fault state through LCD.

- **Dry in**

Dry in function can be configured (see Settings > Dry in).


Dry in	Comments
Connector type	16 AWG Maximum wires
External breaker specification	60 V DC/30 V AC 20 mA max

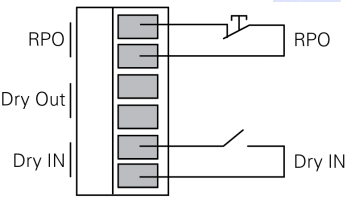

- **Dry out**

Dry out is the relay out, dry out function can be configured (see Settings > Dry out).

Dry out	Comments
Connector type	16 AWG Maximum wires
Inner Relay specification	24Vdc/1A

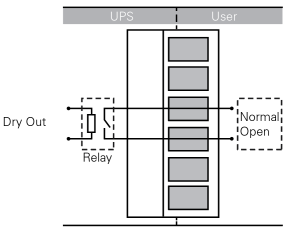

6.3 Intelligent Card (optional)


Intelligent Card allow the UPS to communicate with different types of devices in variety of networking environments. The UPS could use the following connectivity cards, please contact your local distributor for details

- **NMC Card** - Ideal monitoring solution enables user to monitor and control the status of UPS on web browser via internet
- **CMC card** - provides connection to Modbus protocol with standard RS485 signal.
- **AS400 G2 card** - Provides voltage-free dry-contact signals for programmable controller and management system
- **EMP** - Supports temperature and humidity sensors for remote environment monitoring, should work with NMC Card

6.4 UPS Management Software

6.6.1 WinPower

WinPower provides user-friendly interface to monitor and control your UPS. This unique software provides safely auto shutdown for multi-computer systems while power failure. With this software, users can monitor and control any UPS on the same LAN no matter how far from the UPSs.

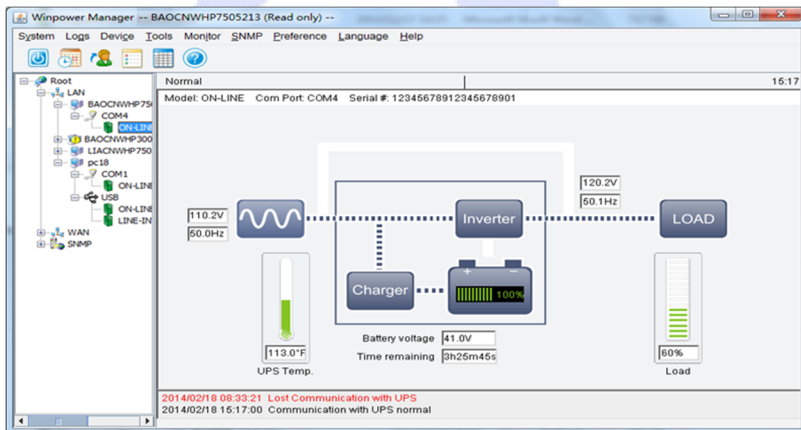

Installation procedure:

1. Go to the website: <http://www.ups-software-download.com/>
2. Choose the operation system you need and follow the instruction described on the website to download the software.
3. When downloading all required files from the internet, enter the serial No: **511C1-01220-0100-478DF2A** to install the software.

When you finish installation, restart your computer, the WinPower software will appear as a green plug icon located in the system tray, near the clock.

7. UPS maintenance

7.1 Equipment care

For the best preventive maintenance, keep the area around the equipment clean and dust free. If the atmosphere is very dusty, clean the outside of the system with a vacuum cleaner.

For full battery life, keep the equipment at an ambient temperature of 25°C (77°F).



The batteries are rated for a 3-5 year service life. The length of service life varies, depending on the frequency of usage and ambient temperature. Batteries used beyond expected service life will often have severely reduced runtimes. Replace batteries at least every 4 years to keep units running at peak efficiency.

7.2 Transporting the UPS



Please transport the UPS only in the original packaging. If the UPS requires any type of transportation, verify that the UPS is disconnected and turned off.

7.3 Storing the equipment

If you store the equipment for a long period, recharge the battery every 6 months by connecting the UPS to utility power. Recommends that the batteries charge for 48 hours after long-term storage.

If batteries were never recharged over 6 months, do not use them. Contact your service representative.

7.4 Recycle

Contact your local recycling or hazardous waste center for information on proper disposal of the used equipment.



Do not dispose of the batteries in the fire. Which may cause battery explosion. The batteries must be rightly disposed according to local regulation.

Do not open or destroy the batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.



Pb

Do not discard the UPS or the UPS batteries in the trash.

This product contains sealed lead acid batteries and must be disposed as it's explained in this manual. For more information, contact your local recycling/reuse or hazardous waste center.



The crossed-out wheeled bin symbol indicates that waste electrical and electronic equipment should not be discarded together with unseparated household waste but must be collected separately. The product should be handed in for recycling in accordance with the local environmental regulations for waste disposal.

By separating waste electrical and electronic equipment, you will help reduce the volume of waste sent for incineration or land-fills and minimize any potential negative impact on human health and environment.

8. Troubleshooting

The UPS is designed for durable, automatic operation and also alert you whenever potential operating problems may occur. Usually the alarms shown by the control panel do not mean that the output power is affected. Instead, they are preventive alarms intended to alert the user.

- Events are silent status information that are recorded into the Event log. Example = "Battery charging".
- Alarms are recorded into the Event log and displayed on the LCD status screen with the logo blinking. Some alarms may be announced by a beep every 1 second. Example = "Battery low".
- Faults are announced by a continuous beep and red LED, recorded into the Event log. Example = Out. short circuit.

Use the following troubleshooting chart to determine the UPS alarm condition.

8.1 Typical alarms and faults

To check the Event log:


1. By pressing  on the menu of "Event log".
2. Scroll through the listed events or faults.
3. The following table describes typical conditions.

WARNING		
Problem Displayed	Possible cause	Remedy
On Maintain Bypass	Maintain bypass switch is open	Check the maintain bypass switch status
Site Wiring alarm	Phase and neutral conductor at input of UPS system are reversed	Reverse mains power wiring.
No battery	Battery pack is not connected correctly	Do the battery test to confirm. Check the battery bank is properly connected to the UPS. Check the battery breaker is turn on or fuse OK.
Battery low	Battery voltage is low	When audible alarm sounding every second, battery is almost empty.
End battery life	The battery has reached the end of its life	Consult dealer if replace the battery
Power overload	Power requirements exceed the UPS capacity	Check the loads and remove some noncritical loads. Check if some loads are failed
Overload pre-alarm	The load exceeds the preset value	Check the loads or reset the pre-alarm value
Fan Lock	Fan abnormal	Check if the fan is running normally or fan detection cable disconnected

UPS temp. alarm	Inside temperature of UPS is too high	Check the ventilation of UPS and the ambient temperature.
Amb. temp. alarm	The ambient temperature is too high	Check the environment ventilation
Imminent shutoff	Insufficient battery backup time	Protect load equipment in time
FAULT		
Inverter overload	Overload	Check the loads and remove some noncritical loads. Check if some loads are failed.
Bypass overload	Overload	Check the loads and remove some noncritical loads. Check if some loads are failed.
Out. short circuit	abnormally low impedance placed on its output and considers it a short circuit	Remove all the loads. Turn off the UPS. Check if UPS output and loads is short circuit. Ensure short circuit is removed before turning on again.
UPS temp. fault	Inside temperature of UPS is too high	Check the ventilation of UPS and the ambient temperature.
DC bus + or - too high	UPS internal fault, the + or -DC BUS voltage is too high	Consult dealer.
DC bus + or - too low	UPS internal fault, the + or -DC BUS voltage is too low	Consult dealer.
DC bus unbalanced	UPS internal fault, the voltage difference between DC Bus+ and DC bus- is too large	Consult dealer.
DC bus short circ.	UPS internal fault	Consult dealer.
Max inverter volt	UPS internal fault, the inverter voltage is too high	Consult dealer.
Min inverter volt	UPS internal fault, the inverter voltage is too low	Consult dealer.
ELSE CASES		
Problem Displayed	Possible cause	Remedy
No indication, no warning tone even though system is connected to mains power supply	No input voltage	Check the building wiring and input cable. Check if the input breaker is closed.
Green LED is not on even though the power supply is available	Inverter not switched on	Press On-Switch to turn on UPS.
Emergency supply period shorter than nominal value	Batteries are not fully charged / batteries defect	Charge the batteries for at least 12 hours and then check capacity.


8.2 Silencing the alarm

Press the ESC (Escape) button 3s on the front panel display to silence the alarm. Check the alarm condition and perform the applicable action to resolve the condition. If the alarm status changes or press the ESC button 3s on the front panel display, the alarm beeps again, overriding the previous alarm silencing.

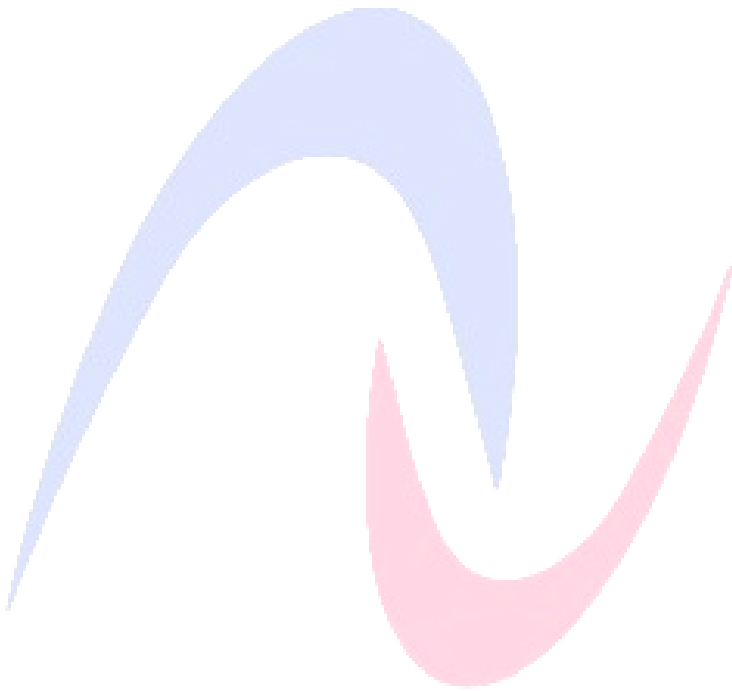

9. Specifications

9.1 UPS Block Diagram

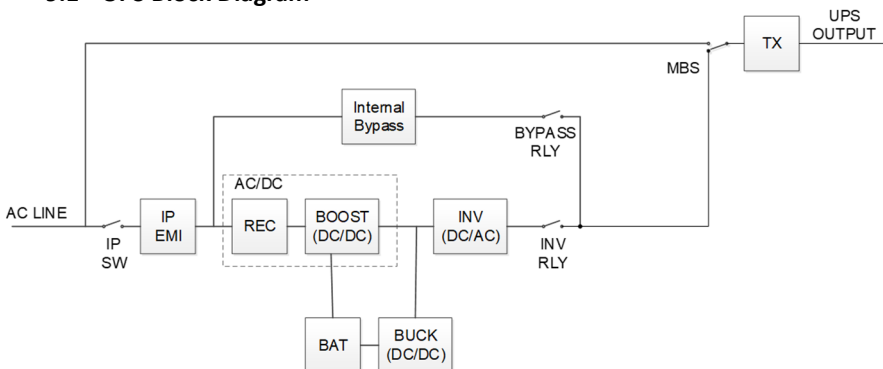

9.2 UPS Specification

Models		MS-ECO6000RT	MS-ECO10000RT
Rated power ⁽¹⁾		6KVA/6KW	10KVA/10KW
Rated frequency		50/60Hz	
Input	Voltage range (Phase voltage)	110VAC 176VAC 276VAC Input Voltage 110Vac-276Vac	
	Rated voltage (Phase voltage)	208/220/230/240VAC	
	Rated current (1phase) with 16pcs battery ⁽²⁾	42A	61A
	Rated current (1phase) with 20pcs battery ⁽²⁾	45A	65A
	Frequency	$\leq 60\%$ rated load: 40-70Hz $> 60\%$ rated load: 45-55Hz (50Hz system)/54-66Hz (60Hz system)	
Charging current ⁽¹⁾	Range	2~12A	2~12A
	Default	4A	4A

Models		MS-ECO6000RT	MS-ECO10000RT
Output	Rated voltage (Phase voltage)	208/220/230/240VAC 104/110/115/120VAC	
	Overload on normal mode	105%-125% Load, 10 minutes transfer to Bypass; 125%-150% Load, 30 seconds transfer to Bypass; >150% Load, 0.5 seconds transfer to Bypass	
	Short-circuit current on normal mode	54A for 200ms max	113A for 200ms max
Transfer Time Line<->Battery		0ms	
Transfer Time INV<->Bypass		0ms	
Battery			
Battery Voltage		240VDC	
Battery Number		20PCS	
Environment			
Ambient temperature		0°C ~ 50°C (Derating 50% above 40°C)	
Relative humidity		0 ~ 95%(no condensing)	
Overvoltage category		II	
Pollution		PD2	
Operating altitude		<3000m (Derating use above 1km, the load should de-rating 1% every up 100m)	
Storage temperature (with battery)		-15°C ~ 40°C	
Storage temperature (without battery)		-25°C ~ 55°C	
Criterion			
Safety		IEC/EN 62040-1, UL 1778, CSA C22.2 No. 107.3-14	
EMC		EN/IEC 62040-2, FCC PART 15	

- (1) In CVCF mode, UPS needs to be de-rated to 60% capacity (rated output power and maximum charging current).
- (2) @ 220VAC input phase voltage, rated output power and maximum charging.

